

# **AITHER**

Monos Pulley Pendant Installation Instructions INSTALLATION MUST BE PERFORMED BY A QUALIFIED ELECTRICIAN PLEASE USE THE FOLLOWING DIAGRAM AND STEPS FOR INSTALLATION

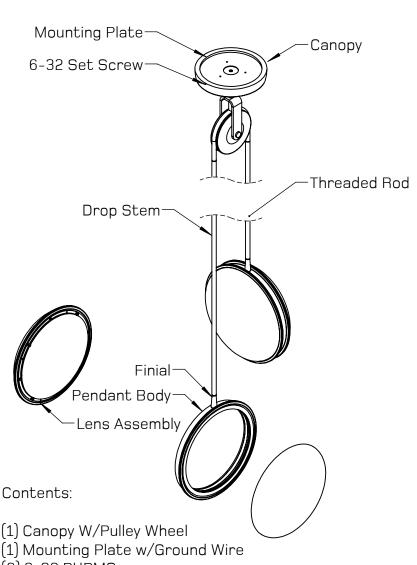

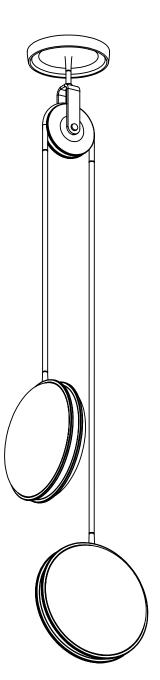

- (1) Canopy W/Pulley Wheel
- (1) Mounting Plate w/Ground Wire
- (2) 8-32 PHPMS
- (2) Drop Stems
- (2) Threaded Rods
- (4) Lens Assemblies
- (2) Pendant Bodies
- (1) Driver
- (7) Blue Wire Nuts
- (1) .05 Hex Key
- (2) Pair White Cotton Gloves


## **AITHER**


### Monos Pulley Pendant Installation Instructions

### INSTALLATION MUST BE PERFORMED BY A QUALIFIED ELECTRICIAN PLEASE USE THE FOLLOWING DIAGRAM AND STEPS FOR INSTALLATION

Installation Instructions:

- 1. Make sure all power is turned off to the junction box where fixture will be installed.
- 2. Make electrical connections from A/C power to A/C input on the high voltage side of the LED driver. If using 0-10V dimming connect purple and gray wires. If not using 0-10V dimming, cap with wire nuts and tape. Secure driver in junction box.
- 3. Install mounting plate to junction box with (2) 8-32 PHPMS. Make ground connection and feed low voltage Black (-) and Red (+) wires through he center hole of the mounting plate. Note: Mounting requirements and hardware to be provided by installer.
- 4. Feed Wires from pulley wheel stems through shortest threaded rod and drop stem first. Screw threaded rod into pulley wheel stems. Ensure there is at least 3" of wire protruding from drop stem. Twist wires from drop stems counterclockwise ≈ 8 times. Connect wires from pendant bodies to wires from pulley wheel. Make sure to connect (+) to (+) and (-) to (-). Screw pendant body onto stem. Carefully feed excess wire through top of canopy while screwing pendant body onto drop stem. Carefully support fixture and repeat for next (longest) stem.
- 5. Carefully raise fixture to mounting plate and connect low voltage red (+) wires to red (+) wire from driver and low voltage (-) black wire to (-) black wire from driver. Feed excess wire into junction box. Align standoffs in canopy to key slots in mounting plate, push in and turn until fixture is seated. Secure with 6-32 set screw.
- 6. Mount lens assemblies to pendant bodies. Align (4) standoffs on lens assemblies to key slots on pendant body. Insert standoffs into key slots and turn until secured.

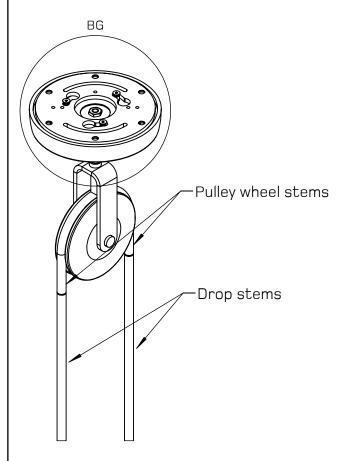

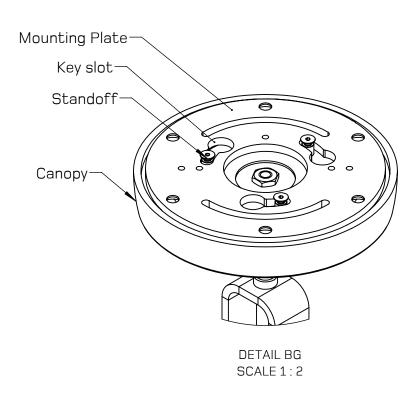

# **AITHER**

#### Monos Pulley Pendant

Installation Instructions
INSTALLATION MUST BE PERFORMED BY A QUALIFIED ELECTRICIAN
PLEASE USE THE FOLLOWING DIAGRAM AND STEPS FOR INSTALLATION

